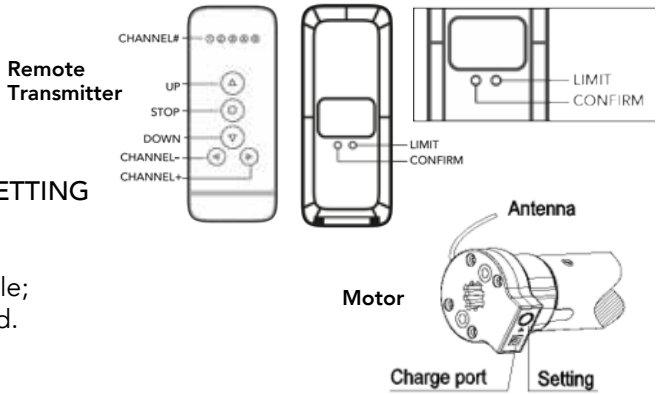
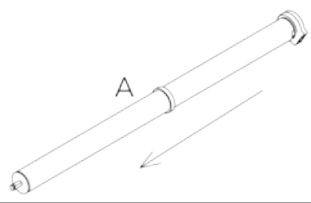
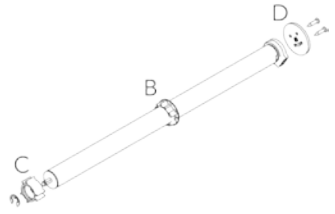
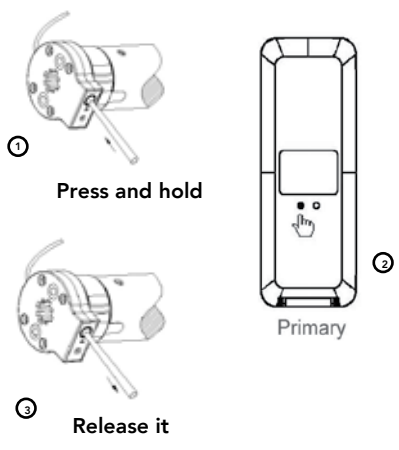
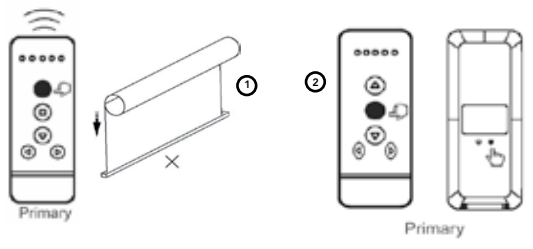
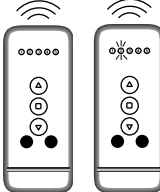
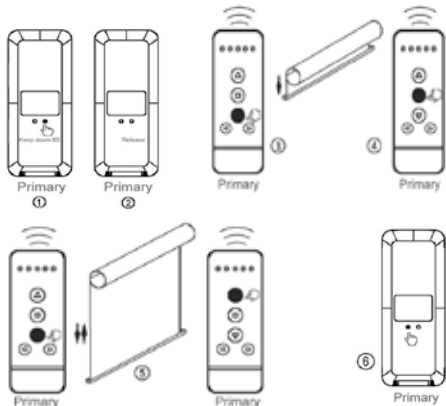
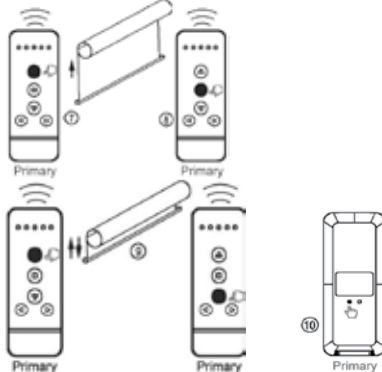
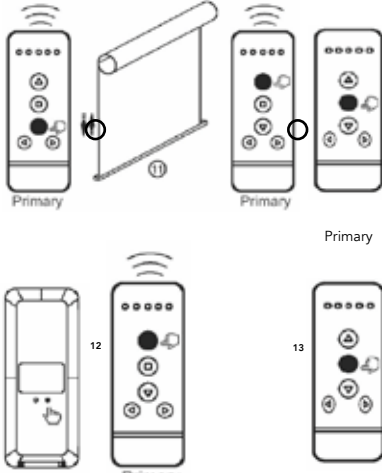


Operation	Step	Operation	Result	Illustration
Technical data		Battery Specification: Li-ion Batter, 2000mAH, 7.4V. Motor Torque/Speed: 1.1Nm/25rpm		
Setup the motor		<p>General Information</p> <p>Illustration shows the side of motor head with <b>SETTING</b> button facing you.</p> <ul style="list-style-type: none"> <li>Motor antenna should be as straight as possible; otherwise, the receiving distance will be reduced.</li> </ul>		 <p>The illustration shows a Remote Transmitter with buttons for CHANNEL#, UP, STOP, DOWN, CHANNEL-, and CHANNEL+. It also shows the Motor with labels for Antenna, Charge port, and Setting button. A detail of the motor head shows the LIMIT and CONFIRM buttons.</p>
Motor assembly	1	A. Remove grease protector ring by opening the split ring and sliding off the motor body	B. Fit Crown by opening the split ring and slide along the motor body until it meets the motor head	
		C. Fit the drive using the circlip to secure in position	D. Attached motor plate with the screws supplied in either left hand or right hand orientation as required	
Pairing remote transmitter with motor	1	Hold down the <b>SETTING</b> button on the motor mount	Motor jogs 2 times	 <p>Step 1: Press and hold the setting button on the motor. Step 2: Release the button when the motor jogs. Step 3: Press the CONFIRM button on the remote transmitter within 10 seconds.</p>
	2	Please release this button when the motor jogs		
	3	Select channel for blind and press the <b>CONFIRM</b> button on the remote within 10 seconds	Motor jogs 2 times. Remote has now been paired with the motor	
Changing motor rotation direction	1	Press <b>UP</b> button	If blind goes up the motor direction is ok. If the blind goes down then the motor direction should be changed	 <p>Diagram 1 shows the motor jogs up (indicated by an arrow) and the blind goes up. Diagram 2 shows the motor jogs down (indicated by an arrow) and the blind goes down, with an 'X' indicating this is the incorrect direction.</p>
	2	Hold down <b>LIMIT</b> button and then press <b>STOP</b> button on the remote transmitter	Hold both buttons until motor jogs - at this moment the motor rotation direction has been changed	

Operation	Step	Operation	Result	Illustration
Selecting a channel	1	Press the CHANNEL + or CHANNEL -	The blue light on the remote will illuminate which channel is currently selected.	
Setup bottom limit	1	Press and hold LIMIT button on the remote	Motor jogs 3 times	
	2	Release the button	Motor is ready to set limits	
	3	Press DOWN button on the remote	Motor runs down	
	4	Press STOP button when motor gets close to the end-point of lower limit	Motor stops	
	5	Press DOWN button	Motor runs step by step to set lower limit accurately	
	6	Press CONFIRM button on the remote	The motor jogs 2 times. The setting has completed	
Setup upper limit	7	Press UP button on the remote	Motor runs up	
	8	Press STOP button when the motor is running close to the upper stop point		
	9	Press UP button	Motor runs step by step to adjust upper limit accurately	
	10	Press CONFIRM button on the remote	Motor jogs 2 times. The setting has completed	
Setup mid-point limit	11	Press UP or DOWN button on the remote then press STOP when desired mid-point height is reached	Motor runs up or down	
	12	Press and hold LIMIT button first then whilst holding LIMIT press UP button on the remote	Hold both buttons until motor jogs. Mid-point is now set	
	13	To move blind to mid-point position press STOP	Motor runs up or down to mid-point if not already at mid-point	

Delete mid-point limit	14	Press <b>UP</b> or <b>DOWN</b> button on the remote to send blind to upper or bottom limit.	Motor runs up to upper limit or down to bottom limit	
	15	Press and hold <b>LIMIT</b> button first then whilst holding <b>LIMIT</b> press <b>UP</b> button on the remote	Hold both buttons until motor jogs. Mid-point is now deleted	
Pairing additional remote transmitter	1	Hold down the <b>SETTING</b> button on the motor mount	Motor jogs 2 times	<p>Press and hold</p> <p>Release it</p> <p>Secondary</p>
	2	Please release this button when the motor jogs		
	3	Press the <b>CONFIRM</b> button on the remote within 10 seconds	Motor jogs 2 times. Remote has now been paired with the motor	
Charging	The motor works with Li-ion battery, please charge when the motor stops working or falters. Please charge the motor by charger. Charging time: Charger 5 to 6 hours.			
Delete original setting on motor	1	Press and hold <b>SETTING</b> button on the motor mount	The motor will jog 2 times firstly, then jog 3 times	<p>Press and hold</p> <p>Release it</p>
	2	Release the button	All the records have been deleted - motor reset	
FAQ	If the motor does not work: <ul style="list-style-type: none"> <li>• Please charge the motor battery first.</li> <li>• If the motor does not stop at the required point, then the stops must be reset.</li> </ul>			