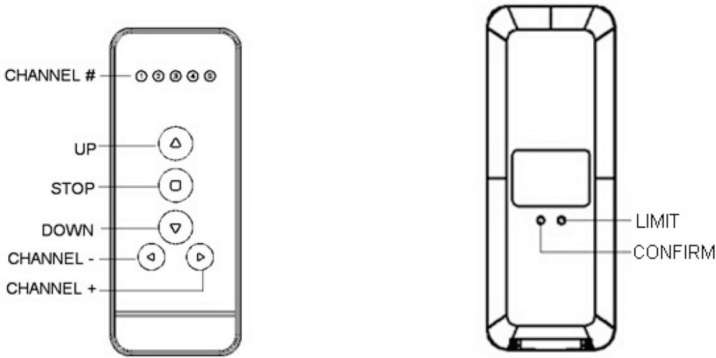 


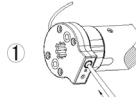
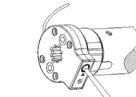
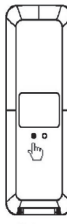
# R1720 Remote Control Instruction



## 1. Select the Channel for Programming:

Press "CHANNEL ▷" or "CHANNEL ◁" to choose the channel until the LED highlights on the channel you want.

## 2. Follow 'Pairing remote transmitter with motor' on your R1710 rechargeable battery motor instructions:

<b>Pairing remote transmitter with motor</b>	1	Hold down the <b>SETTING</b> button on the motor mount	Motor jogs 2 times.	 <p style="text-align: center;">①</p> <p style="text-align: center;"><b>Press and hold</b></p>  <p style="text-align: center;">② <b>Release it</b></p>  <p style="text-align: center;">Primary</p> <p style="text-align: center;">③</p>
	2	Please release this button when motor jogs.		
	3	Press the <b>CONFIRM</b> button on remote transmitter within 10 seconds	Motor jogs 2 times. Remote has now been paired with the motor.	

For additional remotes repeat above steps on secondary remote transmitter

### Please note:

The group channel will be recorded on the motor automatically when the single channel has been programmed on the motor.

For blind setting instruction, follow your R1710 rechargeable battery motor instructions.